

CALIBRE

ELITE 9WL

9 INCH FLOATING WIRELESS CARPLAY / ANDROID AUTO
A/V RECEIVER

WIRELESS



Operating Instructions

Contents

Safety notes

Symbols used	3
Road safety.....	3
General safety notes	3

Front Panel Controls.....4

Placing the device in operation

Switching on/off with the POWER button.....	4
Volume	4
Main menu (Home)	4,5

Apple CarPlay

How to enter CarPlay mode.....	6
How to use CarPlay.....	7
Siri	7

Android Auto

How to enter Android Auto mode.....	7
Play with Android Auto	8
Map.....	8
Call Out / Receive Call	8
Play Music.....	8
Talk with Google.....	8

Radio mode

Start radio mode	9
Select memory bank	9
Tuning into a station.....	9
Storing stations manually	9
Storing stations automatically.....	9
Adjusting the seek tuning sensitivity	10
Switching RDS on/off.....	10
DAB+ Radio	11

Bluetooth mode

Registering Bluetooth devices.....	12
Phone mode.....	13
Dialing	13
Answer a call.....	13
Audio playback via Bluetooth streaming	14

USB media playback

USB data carrier	14
Audio playback from USB.....	15
Video playback from USB	15
Image playback from USB.....	16

Sound Settings

Balance/Fader.....	17
Equalizer	17
Volume distribution (fader/balance)	17
Time Alignment.....	18

Settings

Video	18
General	19
Wi-Fi.....	19
Navigation.....	20
Key Light	20
Steering Wheel Control (SWC)	21
Android Settings	21
Upgrade & Reset.....	22
System Info	22

Connection diagram 23

Troubleshooting 24

Specification..... 26

Safety notes

This car sound system is manufactured according to the state of the art and established safety guidelines. Even so, dangers may occur if you do not observe the safety notes in these instructions. These instructions are intended to familiarise you with the most important functions. Read these instructions carefully and completely before using this car soundsystem. Keep the instructions at a location so that they are always accessible to all users. Always pass on the car sound system to third parties together with these instructions. In addition, observe the instructions of the devices used in conjunction with this car sound system.

Road safety

Observe the following notes about road safety:

Use this device in such away that you can always safely control your vehicle. As the driver, you should not use applications that will distract you from driving.

Follow the driving recommendations during the route guidance only if you are not violating any traffic regulations! Traffic signs and traffic regulations always have priority over driving recommendations.

Always listen at a moderate volume to protect your hearing and to be able to hear acoustic warning signals (e.g., police sirens). During mute phases (e.g., when changing the audio source), changing the volume is not audible. Do not increase the volume during this mute phase.

General safety notes

Observe the following note to protect yourself against injuries:

Use as directed.

As with all Capacitive Touchscreens, if your fingers are wet or sweaty, it will not function properly.

Repairs and installation, if necessary, should be performed by a specialist.

Installation instructions

It is recommended to only have this unit installed by a professional who specialises in vehicle audio system installations. Not all auto electricians have the expertise to install such units.

This car sound system is intended for installation and operation in a vehicle with 12V DC and must be installed in a 2-DIN slot.

Cleaning notes

Solvents, cleaning and scouring agents as well as dashboard spray and plastics care product may contain ingredients that will damage the surface of this unit.

Use only a dry or slightly moistened cloth for cleaning the car sound system.

Disposal notes



Do not dispose of your old unit in the household trash!



Use the return and collection systems available to dispose of the old device.

Front Panel Controls



 
 
Placing the device in operation

Switching on/off with the POWER button

- To switch-on, touch the  button.
- To switch-off, hold the  button pressed for more than 2 seconds.

Volume


Adjusting the volume

- You can adjust the volume in steps from 0 (off) to 40 (maximum). Touch the button  to raise volume and  button to lower the volume.

Muting the car sound system (Mute)


- Briefly touch the  button to mute the device or to reactivate the previous volume.


Main menu (Home)

- In the main menu, you touch the buttons on the touchscreen to call up the different sources and operating modes.
- In the current source, touch the  button. The main menu is displayed.

Home Menu

Touch the center of the screen and drag left to find more source icons.

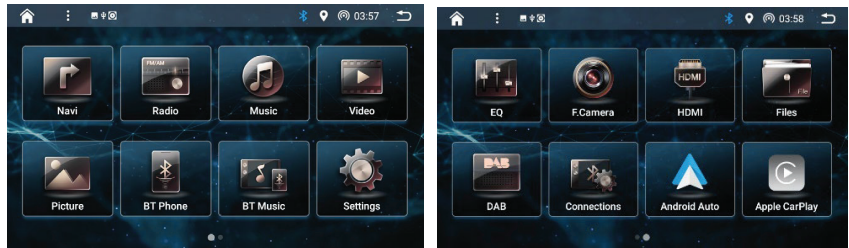

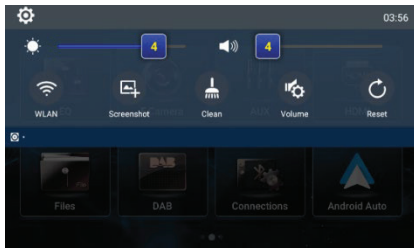

1. Enter the main menu.
2. Top bar: Drag down to see more functions .
3. Now Playing source
4. Back
5. Enter the Radio menu.
6. Enter Android Auto menu.
7. Enter Apple CarPlay menu.
8. Enter Bluetooth Connection menu.

Apple CarPlay

CarPlay is a smarter, safer way to use your iPhone in the car. CarPlay takes the things you want to do with your iPhone while driving and puts them right on your car's built-in display. You can get directions, make calls, send and receive messages, and listen to audiobooks and music, all in a way that allows you to stay focused on the road.

NOTE: Apple CarPlay usage is limited while driving. Functions, content, and usability is determined by the App provider(s).

Controls will vary with each App that is available for CarPlay. For more details visit:

www.apple.com/ios/carplay

Familiarise yourself with your Local and State laws regarding mobile devices. Certain functions might be prohibited and or illegal while driving in your location.


When in doubt, park the vehicle and engage the parking brake first before performing the function(s).

How to enter CarPlay mode

Establish Bluetooth connection between the car unit and your iPhone (refer to the previous chapter "Bluetooth mode").

Agree using CarPlay with the car device.

Please turn off the Wi-Fi function in the settings menu of the car unit before connecting your phone via Bluetooth.

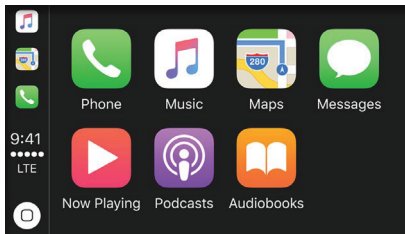

1. To exit CarPlay mode, touch the return button (3) on the frontpanel.

To disconnect CarPlay, select [**Connections**] on the main menu, and deselect the options right to the iPhone.



2. If you want to return to CarPlay mode, touch [CarPlay] on the main menu.

How to use CarPlay

CarPlay features and Siri voice control are specially designed for driving scenarios. It also works with your car's controls. And the apps you want to use in the car have been reimagined, so you can use them while your eyes and hands stay where they belong.

You can use the touch screen of the unit to control CarPlay.

Siri

1. Touch and hold Apple Home key on car product screen or Side icon on iPhone for using Siri voice assistant, such as issuing a call, playing music, opening the map and other voice commands.
2. When iPhone is connected, enable Siri by steering wheel control.

This function is only available on cars equipped with the equivalent key.

3. Control with "Hey, Siri".

To disable Apps or restrict Apps from being used in CarPlay mode- on your iPhone, go to Settings → Screen Time → Contents & Privacy Restrictions → Allowed Apps → CarPlay.

NOTE: The units Bluetooth will turn OFF automatically when CarPlay is in use.

If other devices that are connected via Bluetooth, will be disconnected while using CarPlay.

Android Auto

Android Auto is a smarter, safer way to use your iPhone in the car. CarPlay takes the things you want to do with your Phone while driving and puts them right on your car's built-in display. You can get directions, make calls, send and receive messages, and listen to audiobooks and music, all in a way that allows you to stay focused on the road. NOTE: Requires minimum Android OS 5.0. (Android Auto App must be installed on the phone before connecting).

Android Auto usage is limited while driving. Functions, content, and usability is determined by the App provider(s).

Controls will vary with each App that is available for Android Auto. For more details visit:

www.android.com/auto/

Familiarize yourself with your Local and State laws regarding mobile devices. Certain functions might be prohibited and/or illegal while driving in your location.

When in doubt, park the vehicle and engage the parking brake first before performing the function(s).

How to enter Android Auto mode

Connect via Digital Cable

Connect your smart phone to the CP/AA connector of the unit via the USB Digital Cable.

The unit will enter Android Auto mode automatically.

Note: Some aftermarket cables do not work or work poorly.


- Or -

Connect via Bluetooth

Establish Bluetooth connection between the car unit and your Google phone (refer to the previous chapter "Bluetooth mode").

Agree with the terms provided by Google.

Please turn off the Wi-Fi function in the settings menu of the car unit before connecting your phone via Bluetooth.

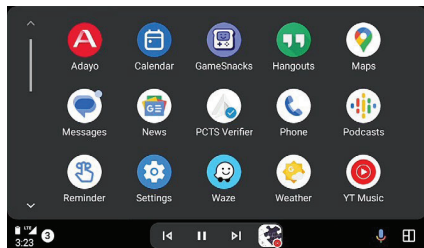

1. To exit Android Auto mode, touch the icon on the front panel.

To disconnect Android Auto, select **[Connections]** on the main menu, and deselect the options right to the Google Phone.



2. If you want to return to Android Auto, touch **[Android Auto]** on the main menu.

Play with Android Auto

Select the Android Auto source to play music.

Map

Touch the **Google Maps** icon of Android Auto to let the phone show you the way.

Call Out / Receive Call

Touch the (Phone) icon on Android Auto for Calling.

Play Music

Touch the (Music) icon of Android Auto to play music.

Talk with Google

Touch the  on the bottom left of LCD for using Google voice assistant, such as issuing a call, playing music, opening the map and other voice commands.

When Phone is connected, enable Google voice by steering wheel control. This function is only available on cars equipped with the equivalent key. Control with Voice Match, such as “Ok, Google”.



Radio mode

In the main menu, touch the “Radio” icon. The radio playback menu is displayed-



Select memory bank.

Different memory banks and wavebands are available. Up to 5 stations can be stored in each memory bank. Touch the **BAND** icon repeatedly until the desired memory bank is displayed. AM/FM/DAB+

Tuning into a station

Tuning into stations manually

Briefly touch the ◀ or ▶ icon once or several times to change the frequency in increments. You can select broadcast frequency directly by dragging the red “|” in the frequency.

Starting station seek tuning.

Touch the ◀ or ▶ icon to start station seek tuning. The radio tunes into the next receivable station.


NOTE: For the reception area Europe: In the FM waveband, only traffic information stations are tuned into if the priority for traffic information is switched on.

Storing stations manually

Set the desired station.

Touch one of the memory icons **P1 - P5** for approx. 2 seconds to store the current station at the button.

Storing stations automatically

 
You can automatically search for and store the strongest search for and store the strongest reception in the region in the current memory bank. Any previously stored stations in this memory bank are deleted in the process. Select a memory band. Touch the  icon.

The tuner starts the automatic station seek tuning. After the storing is completed, the radio plays the station at memory location 1 of the previously selected memory band.

NOTE: For the Europe reception area: If traffic information is switched on, only traffic information is stored.

Adjusting the seek tuning sensitivity.

The seek tuning sensitivity decides whether the automatic station seek tuning finds only strong stations or also weaker stations that may be noisy.

Touch the  icon to adjust the sensitivity of station seek tuning.

If **LOC** is on, only stations with a strong signal are found during seek tuning.

If **DX** is on, stations with a strong and weak signal are found during seek tuning.

RDS/RBDS

The unit has RDS/RBDS function which enables FM stations to send additional information (i.e., station name, program type and other messages) when broadcasting radio.

TA (Traffic Announcement)

When enabled, the unit will automatically tune in to traffic information broadcast while receiving FM broadcasts or playing media.

Once the traffic announcement ends, the original source will automatically resume.

AF (Alternative Frequency)

When enabled, the unit will automatically locate the same tuning program on other stations and select the strongest signal of those being broadcast.

This feature is most useful on long trips when your car goes out of the range of a radio station.

Switching RDS On/Off

Many FM stations broadcast have RDS (Radio Data System) signal in addition to their program in the reception area Europe that allows additional functions, such as the display of the station name.

Touch the **RDS** icon to show RDS options.

Switching the AF (Alternative Frequency) function On/ Off

If the AF function is activated, the car sound system automatically tunes into the best receivable frequency for the station that is currently set.

Touch the icon **AF** to switch the AF function on or off.

Switching priority for traffic announcement on/off

If the reception region is set to Europe, an FM station can identify traffic announcements via RDS signal. If priority for traffic reports are switched on, a traffic report is automatically switched through, even if the car audio system is currently not in radio mode.

Touch the icon **TA** to switch the priority for traffic announcements on or off.

Selecting Program Type and Start Seek Tuning


You can select a program type with the PTY function to purposefully search for stations, for example, that broadcast rock music or sports events.


Touch the icon **PTY** to display the program types.


Scroll up/down a program with the selected program type, it locks on to it and commences playback.

DAB+ Radio


In the main menu, touch the “**DAB**” icon.
The DAB+ radio playback menu is displayed-

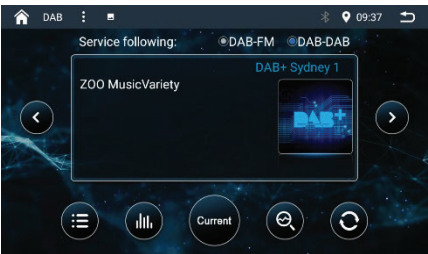


Touch the  icon to see and edit Presets-

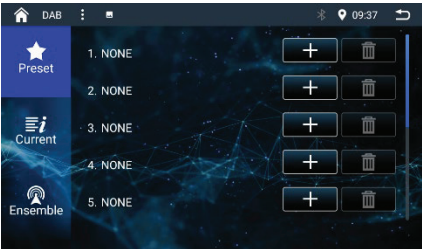

Current channel list-

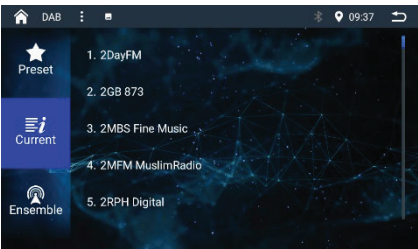

Ensemble-

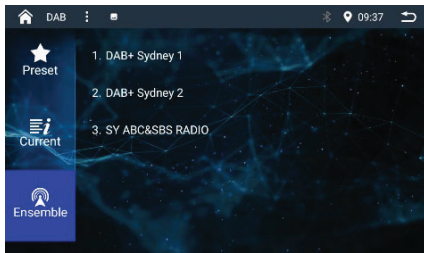

Registering Bluetooth devices

If you want to register a device with the car sound system for the first time, proceed as follows:


Ensure that Bluetooth® is activated at the car sound system and at your Bluetooth® device.

Search for new devices/connections on your Bluetooth® device.

The car sound system appears as "ELITE" in the list of Bluetooth® devices.

Establish the connection; you may have to enter the pairing code that was previously entered on the car sound system.

The connection is being established and the menu for the registered device is displayed.

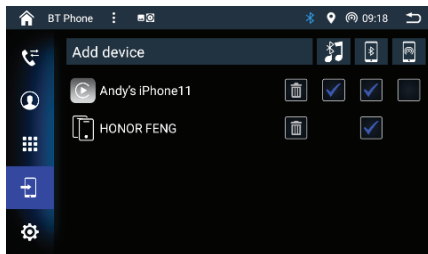

NOTE: If a phone is connected with the unit, the Bluetooth® icon is lighted at the top of the display in all audio/video sources.

Phone mode


Touch the **BT Phone** icon in the Home menu to change to the phone functions.

If you connected a phone with the car sound system via Bluetooth®, the following menu appears.

1. Call up records lists.
2. Call up phone book.
3. Call up the dial keypad menu.
4. Call up device menu.
5. Call up BT setting menu.
6. The dial keypad



Dialing

Enter a phone number with the keypad and touch the  icon.


- Or -

Select a contact/number via the caller lists or phone book.

Answer a call.

If a call is coming in, the "Call in" number is displayed.


Touch the  icon to answer a call. Touch the  icon to reject a call.

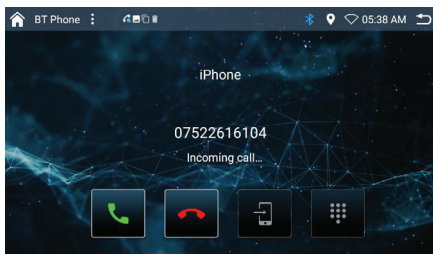

Bluetooth Audio mode

Touch the **BT Music** icon in the Home Menu to change to the audio playback.

In the main menu, touch on **BT Phone**.

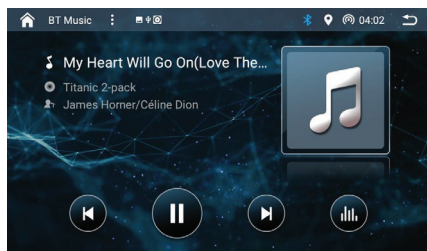

Audio playback via Bluetooth streaming

If an audio streaming device is connected with the car sound system via Bluetooth®, you can play back the music via the car sound system and control the playback.

Short touch ◀ for Title selection.

Interrupt playback and continue playback: || / ▶

Short touch ▶ for title selection.

NOTE: CarPlay or Android Auto must not be active. If being used, disconnect the device to start Bluetooth.

Compatibility with all mobile devices is not guaranteed. Please read through the user guide of the mobile device.

CAUTION: For your safety, the setup process should be accomplished while the vehicle is parked, and parking brake engaged.

USB playback

USB data carrier

This device features 2 USB ports at the rear of the device.

Connecting a USB device

Insert the USB data carrier in the USB socket.

The device automatically switches to USB mode. The data is read and begins playback.

Removing the USB data carrier


Turn off the car sound system. Disconnect the USB data carrier.

Audio playback from USB


The principles of the audio playback (MP3/WMA) from data carriers are identical for all sources. Select the **Music** source via the main menu.

The device changes to the USB source and the playback starts.

1. Progress Bar
2. Sound effect
3. Display the folder/file list.
4. Previous track
5. Interrupt playback and continue playback.
6. Next track
7. Repeat/Random play

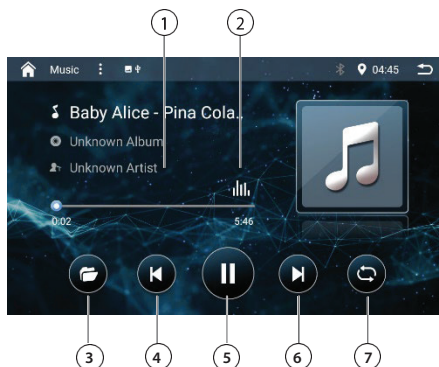

Folder/file list:

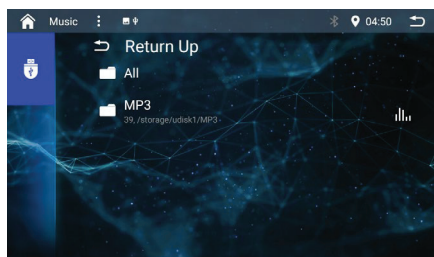


Briefly tap on the name of the folder/track. The folder is opened/the track is started. After starting a title, the playback menu is displayed.


Video playback from USB

Select the **Video** source via the main menu.

1. Progress Bar
2. Play in a small window.
3. Display the folder/file list.
4. Previous chapter
5. Interrupt playback and continue playback.
6. Next chapter
7. Repeat/Random play
8. Aspect ratio

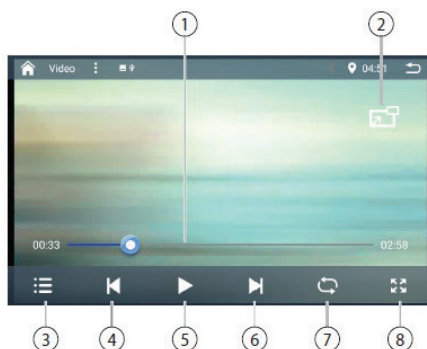


Folder/file list:

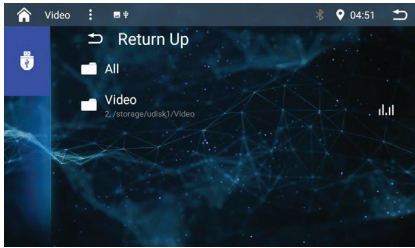

NOTE: Folders and videos are selected and started as described under audio playback

Image playback from USB

Select the **Picture** via the main menu.

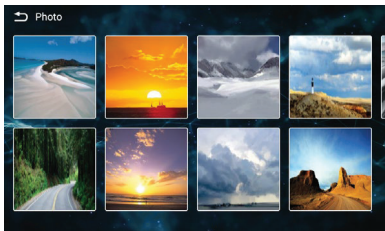

Touch the thumbnail to view the pictures.

Supported formats:


AUDIO: AAC/APE/FLAC/MP3/WMA
VIDEO: MPEG/H.264/MP4/AVI/MKV/FLV/WMV
IMAGES: JPG/JPEG/PNG/BMP/GIF

NOTE: Watching videos or photos while driving is against Federal, State, and Local laws. Video and or photos cannot be viewed while DRIVING. The vehicle must be stationary, and the parking brake applied to enable viewing. We cannot guarantee the flawless function of all USB data carriers available on the market. Turn off the unit before removing the USB data carrier


Sound Settings

Balance/Fader

You can adjust the volume distribution in the vehicle for all sources.



Touch the  icon in EQ menu.
The menu for fader and balance is displayed.

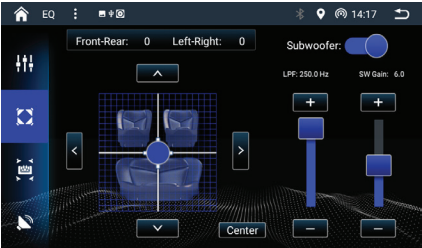Touch the arrow buttons or drag the cursor to adjust fader and balance.



Equalizer

You can adjust the equalizer for all sources.

Touch  on the main menu or  of the current audio source.
The equalizer menu is displayed.


Select a preset equalizer via preset icons
- Flat / POP / Easy / Rock / Classic / Jazz / User1 / User2.

- Or -

Touch the **User** icon to adjust the level of the available frequency bands according to your preferences.
NOTE: With the Reset icon, you can reset the customized setting again.

- Or -


Touch the **Flat** for a linear sound playback.
Turn on the **Loudness** to increase bass and treble at low volume.

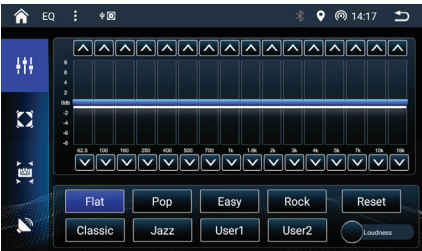

Time Alignment

You can set the runtime delay for each loudspeaker.

Touch the  icon in EQ menu.

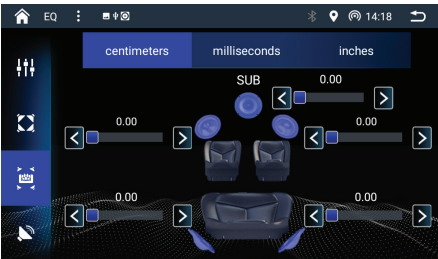

Tap on the slide control or swipe across the slide control of the respective loudspeaker to adjust the runtime

HPF (High Pass Filter)



Settings

In the settings menu, you can adjust the basic settings for the different functions of the device to your requirements. In the main menu, touch the **Settings** icon. The settings menu is displayed. Open the submenus by touching the icons on the left.

Video

Driving Video: Allow videos to play on screen while the hand brake is disengaged (**NOTE:** check the relevant laws in your area).

Front Camera: Adjust the front camera view between mirror image and normal image.

Back Camera: Adjust the rear camera view between mirror image and normal image.

Set the camera hardware channel: Set which input is displayed while reversing. CAM = Camera Input. USB = USB Input. AUX-CVBS = Auxiliary Video Input.

Front camera video input type: Select the signal type of the front camera. The options are CVBS_NTSC, CVBS_PAL, AHD_720P_30HZ, AHD_720P_25HZ, AHD_1080P_30HZ, & AHD_1080P_25HZ.


Rear camera video input type: Select the signal type of the front camera. The options are CVBS_NTSC, CVBS_PAL, AHD_720P_30HZ, AHD_720P_25HZ, AHD_1080P_30HZ, & AHD_1080P_25HZ. TVI_720P_30HZ, TVI_720P_25HZ, TVI_1080P_30HZ, & TVI_1080P_25HZ.

Reversing Track: Enable parking lines (type 1).

Reversing Mute: Mute the sound system while reversing.

Reverse Guidelines: (Enable parking lines (type 2)).

Automatically enter the front camera after reversing: When the vehicle stops reversing, the front camera will automatically be displayed.

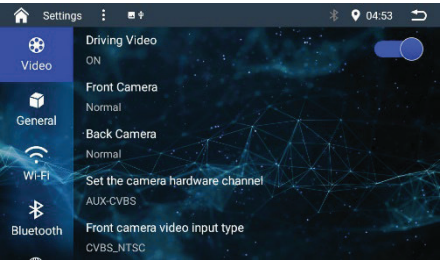

General

Filter Audio File Size: Files saved on the connected USB drive that are smaller than the chosen minimum file size limit will be hidden. The options are no filter, >100kb, >300kb, >500kb, & >800kb.
Key sound: Enable audible feedback, a tone will sound when an option or function on screen is touched.
Link USB Devices, Auto Play Music: When a USB drive is connected, music saved on the drive will automatically start playing if this setting is enabled.

Radio area: Set the tuner frequency range and channel steps for your country.

Bluetooth Microphone: Switch between Internal and External microphone.

Right Hand Drive: When enabled, Apple Carplay and Android Auto will be configured to suit RHD vehicles.

Navigation split screen: When enabled, the navigation app will be windowed instead of occupying the whole screen.



Navigation position when switching split screen: Set the position of the navigation window between the top left or bottom right side of the screen.

Percentage of Navigation Mix: Set the music volume level while navigation voice guidance is playing. No Mix = music is muted during voice guidance. 100% = music volume is unchanged during voice guidance.

USB port 0 protocol: Select the speed of the connected USB device. USB2.0 or USB1.1.



USB port 1 protocol: Select the speed of the connected USB device. USB2.0 or USB1.1.

Side key light: Illuminate the front panel controls when enabled.

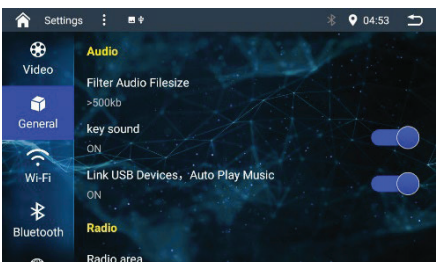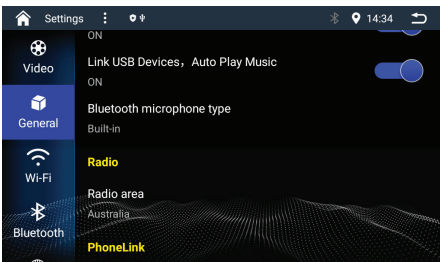


Wi-Fi

Turn on Wi-Fi and connect to your phone's hotspot in this menu.

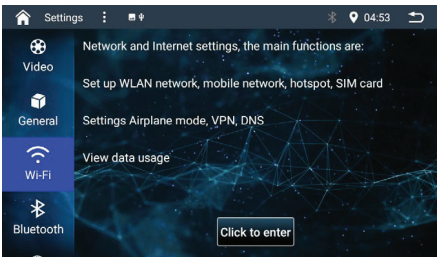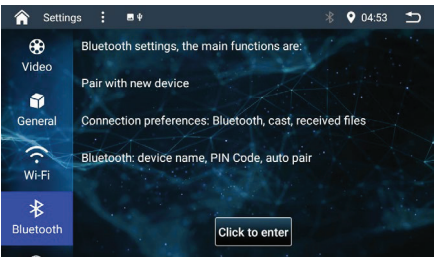

Navigation

Select a Navigation app from the available list.

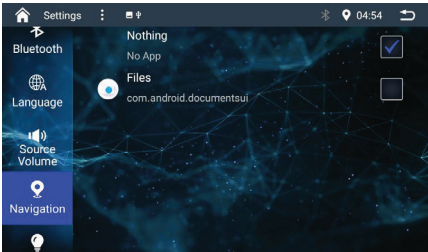

Key Light

Set the color of the illuminated front panel controls or tap the light bulb icon to cycle each colour.




Steering wheel controls (SWC)

Control the system with the buttons on your steering wheel by programming the steering wheel control functions in this menu. A SWC adapter may be required for your vehicle (sold separately).


- 1. Touch the function icon on the screen that you want to program.
- 2. Hold the corresponding button on the steering wheel until a yellow tick icon appears.
- 3. Repeat steps 1 and 2 for every function that you want to program.
- 4. Touch **Save and Exit** to save the programming and exit this menu.

If you make a mistake and want to redo the programming, touch **Reset** and try again.

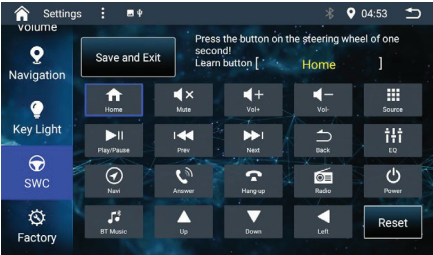


Android Settings

View and adjust the Android settings.

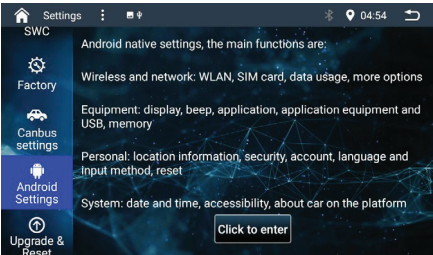


Upgrade & Reset

- Upgrade: Install software updates that are loaded on a connected USB drive.
- Reset network settings: Delete all saved Bluetooth and Wi-Fi pairings from the connections list.
- Reset apps: Reset all app settings back to factory default.
- Factory settings: Reset the system back to factory default.
- MCU reset: Reboot the system.


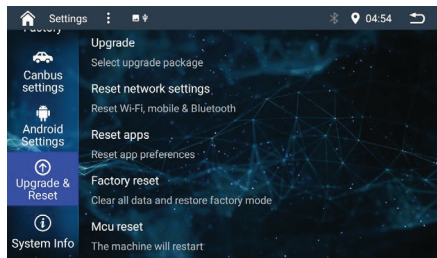


System Info

View the system version information.

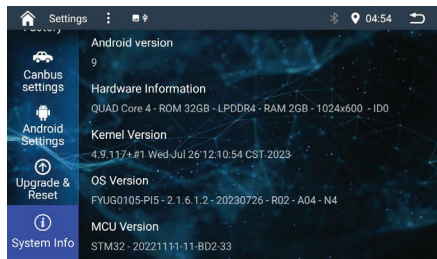

Connection diagram

 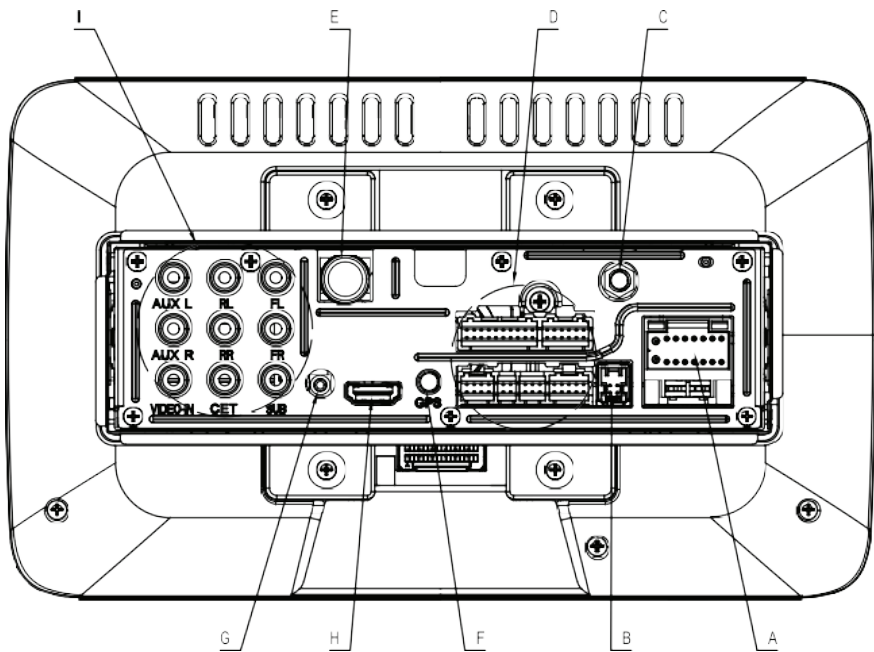

NO.	CONNECTOR A
1	GND
2	BAT
3	ACC
4	ILL
5	REVERSE
6	SW KEY2
7	SW KEY1
8	P ANT
9	FR-
10	RL-
11	FR+
12	RL+
13	FL-
14	RR+
15	FL+
16	RR-



NO.	CONNECTOR B
1	USB VBUS
2	USB D-
3	USB D+
4	GND
5	GND Shield



NO.	CONNECTOR E
1	RADIO
2	GND




NO.	CONNECTOR H
1	TMDS_D2+
2	GND
3	TMDS_D2-
4	TMDS_D1+
5	GND
6	TMDS_D1-
7	TMDS_D0+
8	GND
9	TMDS_D0-
10	TMDS_CLK+
11	GND
12	TMDS_CLK-
13	NC
14	NC
15	RX_SCL
16	RX_SDA
17	GND
18	VCC 5V
19	RX_HPD



NO.	CONNECTOR F
1	GPS
2	GND




NO.	CONNECTOR G
1	DAB
2	GND

 

NO.	CONNECTOR D
1	P.CONT
2	NC
3	NC
4	NC
5	NC
6	NC
7	NC
8	NC
9	NC
10	NC
11	NC
12	GND
13	NC
14	NC
15	NC
16	NC
17	FRONT CAMERA
18	NC
19	MEG
20	MEG+

NO.	CONNECTOR D
21	NC
22	NC
23	NC
24	NC
25	NC
26	NC
27	NC
28	NC
29	NC
30	NC
31	NC
32	NC
NO.	CONNECTOR D
33	GND
34	NC
35	NC
36	NC
37	NC
38	NC
39	CAN TX
40	CAN RX

NO.	CONNECTOR D
41	NC
42	NC
43	NC
44	NC
NO.	CONNECTOR D
45	USB 5V
46	USB2 D+
47	GND
48	USB2 D-
49	USB4 D+
50	USB4 D-
NO.	CONNECTOR D
51	NC
52	Telephone module
53	NC
54	GND
55	NC
56	CAMERA
57	CAMERA POWER (8-14V)
58	GND
59	PARKING
60	NC

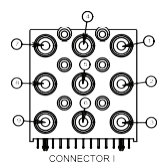

NO.	CONNECTOR I
1	RCA FL
2	RCA FR
3	RCA SUB
4	RCA FL
5	RCA FR
6	NC
7	AUX AL
8	AUX AR
9	AUXVIDEO IN

Troubleshooting

What appears to be trouble is not always serious. Please check the following points before calling a service center.

Problem	Cause	Corrective action
Unit won't power on	Unit fuse is blown.	Replace with a new 15A fuse.
	Fuse in fuse box is blown.	Replace fuse with correct rating.
No/low audio output	Speaker wires broken	Check wiring and correct.
	Speakers damaged.	Replace speakers.
	Fader/balance channel settings adjusted incorrectly.	Adjust the fader/balance channel setting to the center position.
	Speaker wiring is in contact with metal part of car.	Insulate all speaker wiring connections.
Poor sound quality or distortion	Speaker power or impedance rating does not match unit.	Replace speakers.
	Speaker wires are damaged.	Check wiring and correct.
	Speaker is shorted.	Replace speakers.
Unit resets itself when engine is off	Incorrect connection between ACC (red) and BATT (yellow) wires.	Swap the ACC (red) and BATT (yellow) wires.
	Car battery voltage is dropping when engine is started.	Replace car battery.
Warning information is constantly displayed.	Parking brake wire is not connected to the hand brake.	Connect the parking brake wire.
Video is distorted.	Video cable damaged.	Replace cables.
	Poor connection.	Check wiring and correct.
	Incorrect video settings	Adjust video settings.

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Windows® and Windows Media® are registered trademarks of the Microsoft Corporation in the U.S.A. and/or other countries.

This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories

SPECIFICATIONS

GENERAL

- 9" 1024x600 High Resolution Capacitive Touchscreen
- Android 9 OS
- Ultra Memory
- Steering Wheel Control (Programmable)
- Digital Clock
- ISO 1-DIN Mounting
- Speaker Impedance 4-8ohm
- 10.8~16 DC Voltage
- -20° to +60°C Operating Temp
- 238W x 143H mm Floating Panel
- 178W x 50 mm Body

NAVIGATION

- Via CarPlay/Android Auto

MULTIMEDIA

- Built-in Wi-Fi
- 3 x Rear USB 2.0
- 1 x Rear A/V RCA Input
- 2 x Camera Input (PAL/NTSC/720p/1080p)
- Audio Formats: AAC/APE/FLAC/MP3/WMA
- Video Formats: MPEG/H.264/MP4/AVI/MKV/FLV/WMV
- Image Formats: JPG/JPEG/PNG/BMP/GIF

TUNER

- PLL Synthesized AM/FM
- ELITE RDS AM/FM Tuner
- FM 87.5-108MHz; AM 531-1701KHz
- 18 FM/ 12 AM Presets

AUDIO

- Max Power: 4x45W @ 4Ω
- RMS Power: 4x20W @ 1KHz 1% THD 4Ω
- 16 Band EQ: 62.5/100/160/250/400/500/600/700/1K/1.6K/2K/3K/4K/5K/7K/10K/16K
- Sub Out LPF: 25/31.5/40/50/63/80/100/125/160/200/250Hz
- Time Alignment: Front L/R, Rear L/R, Sub
- Loud/Mute
- 4 x RCA Pre-out 5V
- 1 x Sub RCA Pre-out 5V

BLUETOOTH

- A2DP Audio Streaming
- Hands Free Phone
- Simultaneous 2 x Phone Connect
- Phonebook & Search
- Call History
- External Microphone

INCLUDES

- 1m USB Lead x 2
- 10cm USB LEad
- DAB+ Antenna
- GPS Antenna
- Wi-Fi Antenna
- ISO Wiring Harness
- Camera Harness
- CANBUS Wiring Harness
- Front Camera & MIC Harness
- Surround Frame
- Installation Cage
- Removal Keys
- External HF Mic

NOTES

WARRANTY

Congratulations on your purchase . You're joining thousands of satisfied customers who enjoy & experience the benefits of the products we distribute. In the unlikely event that some technical difficulty arises with your purchase, be assured that we are most anxious to see that the problem is quickly rectified to your satisfaction. Please familiarise yourself with the following simple conditions of our warranty. This warranty covers faults through component failure or failure of the product to operate in accordance with published specifications. Product failure as a result of unreasonable environmental conditions, accident, misuse, improper installation, unauthorised repair, vehicle electrical or wiring faults or neglect etc, will not be covered by this warranty. Removal and installation costs, if any, would be paid by the owner as well as any freight or postage costs of transporting the product to AUTOBACS AUSTRALIA PTY LTD and shall not be liable or responsible for any loss of use of this product or any form of consequential loss.

CONSUMER WARRANTY

This product is warranted by AUTOBACS AUSTRALIA PTY LTD to be free from defects in materials and workmanship under **NORMAL USE** for a period of **TWENTY FOUR MONTHS** from the date of purchase.

WITHIN 30 DAYS OF PURCHASE DATE:

Please return the unit for replacement to our National Service Centre or the Retailer from where you made the purchase. All accessories must be included. Proof of purchase date **must** accompany the products.

AFTER 30 DAYS OF PURCHASE DATE:

Warranty repair and service is carried out by our National Service Centre. Repair and service will be carried out at no cost to the owner if proof of ownership and the date of purchase can be verified to the satisfaction of the authorised centre concerned with this repair. This proof should take the form of either:

- a) The warranty card accompanying this product, stamped and dated by the dealer.
- b) A Tax Invoice or Receipt showing full details of original vendor, purchaser, model number and serial number.

COMMERCIAL WARRANTY

A product used in or associated with a commercial application will carry a limited TWELVE MONTHS warranty. An abnormal commercial application is one where usage, dust, vibration, heat/cold and other environmental conditions exist at an extreme level.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Purchaser's Name: _____

Purchaser's Address: _____

Model Number: _____ **Serial Number:** _____

Dealer Name: _____ **Date of Purchase:** / /

Dealer Address: _____

Invoice/Sales Docket no: _____

General Hints: To expedite service and prompt return of the equipment, please:

- a) Clearly describe the fault in detail
- b) Safely and securely pack the unit for transport
- c) Include your return address
- d) Provide proof of purchase date as outlined above

National Service Contacts:
AUTOBACS AUSTRALIA PTY LTD
Telephone: 1300 288 029
email: services@autobacs.com.au

