



2.0 CHANNEL SOUNDBAR WITH BLUETOOTH

# SONIC48




BLUETOOTH 5.0

12  240V SYSTEM

 TV  
MOUNTING  
BRACKETS

## CONTENT GUIDE

1. Safety Warning -----	3
2. Remote Control Functions & Care-----	4, 5
3. Inputs & Controls -----	6
4. LED Light/Voice Announcements -----	6, 7
5. Connections -----	8,10
6. Functions -----	10, 11
7. Troubleshooting -----	12, 13
8. Specifications -----	14, 15
9. Warranty -----	18 - 20

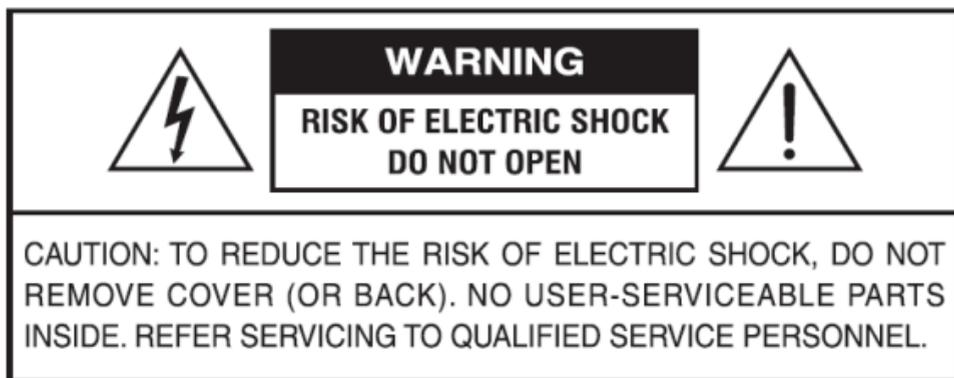

The purpose of this symbol is to notify the user of the existence of unprotected “hazardous voltage” inside the product’s housing, which could potentially pose an electric shock hazard to individuals.




This symbol indicates the existence of crucial guidance and upkeep instructions within this manual that must be observed by the user.

## REMOTE CONTROL FUNCTIONS



1. Switch on/off and put in standby mode
2. Mute and un-mute
3. Select input source
4. Increase / Decrease volume
5. Skip to previous track
6. Skip to next track
7. Play/Pause
8. **USB** To select USB mode
9. **EQ** Equaliser (Bass Adjustment)
10. **REP** In USB mode, to repeat audio file
11. **BT** Connect a compatible Bluetooth device
12. **AUX** To select Line in mode
13. **LED** Indicator LED on/off


## REMOTE CONTROL BATTERY USAGE AND CARE

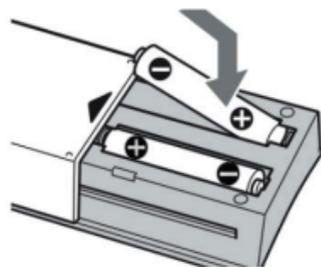

- Remote control needs a clear line of sight to the sensor near the indicator LED in order to function.
- If the remote control is used in close proximity to other infrared devices, the remote control or other devices may not function correctly.
- To prevent battery leakage from occurring during extended periods of non-use (over a month), it is recommended to remove the batteries from the remote control. In the event of a battery leak, ensure to clear any remnants from the compartment and replace with fresh batteries.
- Only insert batteries intended for use in this device.
- Do not heat or disassemble the batteries. Dispose used batteries responsibly.
- Never transport batteries with other metal objects - this could cause short circuits, leakage or an explosion.

## INPUTS & CONTROLS

- Long press for 3-5 seconds to switch on/off
- Short press to switch modes
- Pause/Play
- Bluetooth connection(long press "pair")
- Long press for 3-5 seconds for volume up; short press for next track.
- Long press for 3-5 seconds for volume down; short press for previous track.

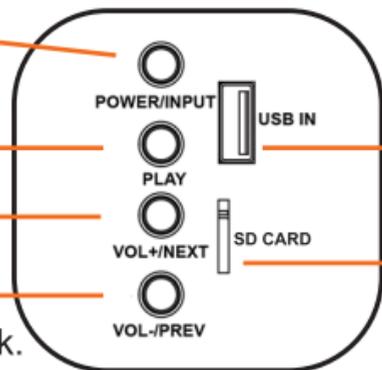

- USB 2.0 port.  
Media Playback
- Micro SD port  
Media Playback

## LED LIGHT/VOICE ANNOUNCEMENTS

- Standby - Red light
- Power on - Blue light with audio tone.
- After start up unit automatically switches to BT pairing mode. Standby LED will flash blue/red alternatively.
- After pairing is successful, blue light will flash slowly.

## **LED LIGHT/VOICE ANNOUNCEMENTS** (continued)

- Bluetooth mode is the default startup mode and does not have access to USB or TF card hardware. Standby LED will flash blue/red alternatively. Once pairing is successful, blue light will flash slowly, unless it's off. Voice will announce "paired".
- Line in input mode is indicated by a blue LED light, except when LED is off; and a voice announcement will say "Line in".
- USB input mode, the LED light is blue, except when off, and a voice announcement will say "USB"
- Coaxial & Optical input mode, a voice prompt will announce the change. Unless the LED is off, it will remain steady on; if the LED switches on, blue light will also remain steady.
- When powering off, red light will be steady on, along with an audio tone.

## CONNECTIONS

### Bluetooth

Connect to a Bluetooth-enabled TV, MP3 player, or mobile phone and listen to music and sound playback from your Bluetooth device.

**Note:** *Bluetooth connectivity works effectively within a range of only 10 meters. If the Bluetooth device you have paired with is compatible with BT2.1, BT3.1, BT4.0, BT4.2, or BT5.0, then you can use your sound bar to play audio from the paired device.*

### BT Setup

- Turn soundbar on.
- Set Soundbar to Bluetooth mode.
- Search for and connect to “SONIC48” on your Bluetooth device.

**Note:** *If the soundbar fails to locate another device within two minutes, it will automatically link with the last synced device. Additionally, the sound bar will terminate the connection if the other device is positioned beyond reach. In case the connection is lost, simply refer to the instructions to reconnect the devices.*

## CONNECTIONS (continued)

### Line-IN/Coaxial


Connect with AUX or coaxial cable

Using the  button on the remote control, you can switch from Bluetooth to another input.

### INPUTS

- Use provided jack cable to connect from the headphone output of the appliance

- Use provided cinch cable to connect the digital output of the appliance.

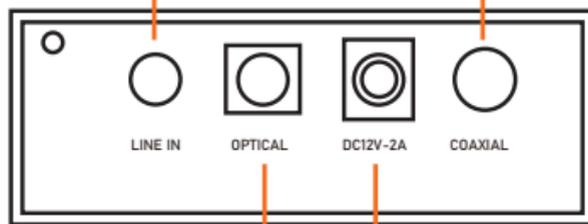

- Optical audio in

- Power in (cig or AC power cable supplied)

## CONNECTIONS (continued)

### Warning

To avoid product damage, make sure the voltage supplied matches the voltage specified. Connect all other cables first before plugging in the DC power supply cable. Use the DC 12V socket on the device to connect the power supply cable.

## FUNCTIONS

### Power supply

The power supply must be connected to utilize all player and remote control functions in standby mode.

### Turning system on/off

To turn on/off the soundbar, press the  POWER button on the device or remote control.

**Note:** *It is important to disconnect the power supply if the device will not be used for a prolonged period.*

## **FUNCTIONS** (continued)

### **Adjusting the volume**

Increase or decrease the volume during playback by pressing the VOL+/VOL- button.

### **EQ (bass) Sound settings**

Alternate through 6 sound settings by pressing the EQ button on the remote.

1. Normal
2. Rock
3. POP
4. Classic
5. Jazz
6. Country

### **Mute**

To mute the volume during playback, simply press the MUTE button, and press it once more to restore sound.

## **TROUBLESHOOTING**

Attempting to repair the soundbar on your own can result in physical damage to the unit, which will in turn void its warranty. If you notice a problem, check the below points before contacting the Autobacs service team.

### **No power**

- Ensure the power supply is connected properly.
- Press standby button to turn device on.

### **Remote control is not working**

- Ensure you are not too far away from the soundbar.
- Check batteries in remote and replace if necessary.
- Point remote directly at device sensor, located at the front of the soundbar.

### **Volume won't change with remote control**

Follow steps from the above point.

### **Audio playback is very low**

- Ensure volume of TV or mobile device connected is not set to low.
- Soundbar is designed for indoor use. If used outdoors, audio quality will be reduced due to ambient noise.

## **TROUBLESHOOTING** (continued)

### **Not compatible with TV**

- Ensure audio cable is connected to the correct port on the soundbar.

### **Buzzing noise coming from soundbar**

- It is possible that you may hear a slight buzzing noise in a quiet environment. This is the built in amplifier that is not usually heard.

### **The device is not working**

Disconnect device from the power supply and reconnect.

## SPECIFICATIONS

### General

- Power Consumption: DC 12V(10 - 1V)
- Speaker Power: 2 x 15W
- Audio Input Sensitivity: 500mV  $\Omega$
- Frequency Range: 50 - 20,000Hz
- Dimensions: W 480 x H 60 x D 60mm

### Speaker

- Impedance: 4 $\Omega$
- Rated Capacity: 20W

### Remote Control

- Distance: 6m
- Angle: 30°

## **SPECIFICATIONS** (continued)

### **Bluetooth**

- Bluetooth: 5.0
- Frequency Range: 2402 - 2480MHz

### **INCLUDED**

- Remote Control
- Instruction Manual
- Coaxial Cable (RCA to RCA)
- Line-IN Cable (3.5mm to 3.5mm)
- L Type Metal Bracket x 2
- Splitter DC Cable
- AC Power Adaptor
- Cigarette Adaptor
- M5 Screws x 2

**Note:** *Design, functions and equipment /fittings are subject to change. Images are for illustrative purposes only, product may differ.*

## NOTES

## NOTES

## WARRANTY

In the unlikely event that some technical difficulty arises with your purchase, be assured that we are most anxious to see that the problem is quickly rectified to your satisfaction. Please familiarise yourself with the following simple conditions of our warranty. This warranty covers faults through component failure or failure of the product to operate in accordance with published specifications. Product failure as a result of unreasonable environmental conditions, accident, misuse, improper installation, unauthorised repair, vehicle electrical or wiring faults or neglect etc, will not be covered by this warranty. Removal and installation costs, if any, would be paid by the owner as well as any freight or postage costs of transporting the product to AUTOBACS AUSTRALIA PTY LTD and shall not be liable or responsible for any loss of use of this product or any form of consequential loss.

## CONSUMER WARRANTY

This product is warranted by AUTOBACS AUSTRALIA PTY LTD to be free from defects in materials and workmanship under **NORMAL USE** for a period of **TWELVE MONTHS** from the date of purchase.

### **WITHIN 30 DAYS OF PURCHASE DATE:**

Please return the unit for replacement to our National Service Centre or the Retailer from here you made the purchase. All accessories must be included. Proof of purchase date **must** accompany the products.

### **AFTER 30 DAYS OF PURCHASE DATE:**

Warranty repair and service is carried out by our National Service Centre. Repair and service will be carried out at no cost to the owner if proof of ownership and the date of purchase can be verified to the satisfaction of the authorised centre concerned with this repair. This proof should take the form of either:

- a) The warranty card accompanying this product, stamped and dated by the dealer.
- b) A Tax Invoice or Receipt showing full details of original vendor, purchaser, model number and serial number.

### **COMMERCIAL WARRANTY**

A product used in or associated with a commercial application will carry a limited **TWELVE MONTHS** warranty.

An abnormal commercial application is one where usage, dust, vibration, heat/cold and other environmental conditions exist at an extreme level.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**Purchaser's Name:** \_\_\_\_\_

**Purchaser's Address:** \_\_\_\_\_

**Model Number:** \_\_\_\_\_

**Serial Number:** \_\_\_\_\_

**Dealer Name:** \_\_\_\_\_

**Date of Purchase:**     /     /

**Dealer Address:** \_\_\_\_\_

**Invoice/Sales Docket no:** \_\_\_\_\_

General Hints: To expedite service and prompt return of the equipment, please:

- a) Clearly describe the fault in detail
- b) Safely and securely pack the unit for transport
- c) Include your return address
- d) Provide proof of purchase date as outlined above

**National Service Contacts:  
AUTOBACS AUSTRALIA PTY LTD**

Telephone: 1300 288 029

Email: [services@autobacs.com.au](mailto:services@autobacs.com.au)

