

Uniden[®]

UH755 Series **Handheld UHF-CB Transceiver**

For more exciting new products please visit our website:
Australia: www.uniden.com.au

OWNER'S MANUAL

Warning

SPLASHPROOF: IP54

Uniden's UH755 radio is designed to meet the water & dust ingress standard of IP54.

This Means:

Being defined as able to withstand water splashes from any direction.

The UH755 will only meet this rating if fully assembled and all knobs, covers and fittings are well maintained and correctly fitted. This means that the accessory cover is fully closed, and the battery pack and antenna are attached and securely fastened.

LITHIUM ION BATTERY PACK WARNING

- This equipment contains a Lithium Ion Battery Pack.
- The Lithium Ion Battery Pack contained in this equipment may explode if disposed of in a fire.
- Do not short-circuit the Battery Pack.
- Do not charge the Lithium Ion Battery Pack used in this equipment in any charger other than the one designed to charge this Battery Pack. Using another charger may damage the Battery Pack or cause the Battery Pack to explode.
- Lithium Ion batteries must be disposed of properly.



NOTE

USER LICENSE INFORMATION

The citizen band radio service is licenced in Australia by ACMA Radio-communications (Citizen Band Radio Stations) Class Licence and in New Zealand by MBIE General User Licence for Citizen Band Radio and operation is subject to conditions contained in those licenses.

Contents

Introduction	
Features	4
Included in your Package	5
Optional Accessories	5
Controls and Indicators	6
Getting Started	
Attaching the Antenna	7
Attaching the Beltclip	7
Attaching the Battery Pack	8
Connect the Drop-in Charger with AC Adaptor	9
Charging the Battery Pack	9
Battery Level Display & Automatic Battery Save	10
Accessory Jack (SPKR/MIC) Cover	10
Connecting the Optional SPKR/MIC	10
Operation	
Power On/Off	11
Volume	11
Selecting a Channel	12
Instant Channel Function (Priority Channel)	12
How to Transmit and Receive High/Low Transmit Power	13
Squelch	14
Call Function	15
Using a Repeater Channel	15
To Operate UH755 in Duplex Mode	16
Scanning	17
What is Open Scan (OS) Mode?	17
What is Group Scan (GS) Mode?	17
Add/Remove Channels from SCAN Memory	18
To Start Channel SCAN	18
Menu Functions	20
CTCSS / DCS	20
BCL (Busy Channel Lockout)	21
VOX (Built-in Voice Activated Circuit)	22
Call Tone (Selecting a Call Tone)	22
Scramble (Voice Scramble)	22
Compander	23
Roger Beep	23
Key Beep	24
Backlight (Timer)	24
Key Lock	24
CTCSS & DCS Codes and Frequencies	25-26
UHF-CB Channel Guidelines, Channels & Frequencies	27-29
Warranty	30

Introduction

The UH755 is an IP54 splashproof, portable two-way UHF-CB radio. This hand held UHF-CB radio is designed to give consistent, outstanding performance in many conditions and situations. To ensure that you get the most from the UH755 features, please read this operating guide carefully before using the unit.

FEATURES

- Narrow Band (NB) 80 Channel UHF-CB Radio¹
- 5W Max TX Power
- 1W/5W Switchable TX Power
- Splashproof (meets IP54 splashproof specifications)²
- Negative LCD Dot Matrix Display with Backlight timer
- 50 Built-in CTCSS and 104 DCS codes
- Duplex Mode for Repeater Access¹
- One-touch Instant Channel key
- 10 Call Tones
- Open Scan with programmable CH memory
- Group Scan with Priority (Instant CH) Watch
- Busy Channel Lockout Function
- VOX Function
- Voice Scramble
- Audio Compander
- Key Beep
- Roger Beep
- Keypad Lock
- Accessory Jack for optional Headset or Speaker MIC
- Rechargeable Lithium-Ion Battery
- Low Battery Alert
- Battery strength Indicator
- Auto Battery Save

¹ Refer to page 28 - page 29 for channel information

² The UH754 radio meets splashproof (IP54) specifications only when the battery, the antenna and speaker MIC jack cap are correctly installed. Note: The UH755 does not retain its IP54 rating when an accessory Earpiece or Speaker MIC is connected.

Included in your Package

Items	UH755	UH755-2DLX
UH755 UHF Radio	1	2
Lithium Battery (1500mAh)	1	2
Antenna	1	2
Beltclip	1	2
Drop-In Charger	1	2
AC Adaptor	1	2
Cig-Lead Adaptor	-	2
Speaker Mic	-	2
Earpiece Mic	-	2
Soft Carry Case	-	1
Owner's Manual	1	1



NOTE

If any of these items are missing from the box, contact your place of purchase, immediately.



Optional Accessories

- Speaker Mic
- Earpiece Mic


Visit the UH755 page on the website for more information on the availability & range of optional accessories;

www.uniden.com.au

Controls and Indicators

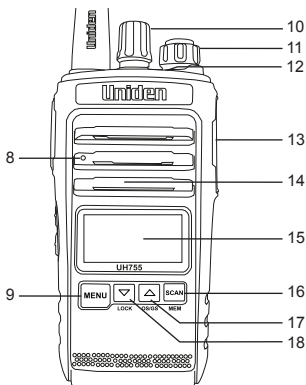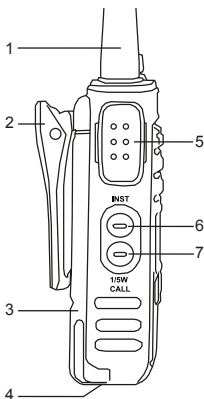

- 1 Antenna
- 2 Beltclip
- 3 Battery
- 4 Battery Release Clip
- 5 **[PTT]** (Push to Talk) Key
- 6 Instant Channel Key
- 7 **[1/5 W]** Transmit Power key/
[CALL] Call Tone key
- 8 Microphone
- 9 **[MENU]** Key
- 10 **[CHANNEL]** /Menu list Change
- 11 **[ON/OFF VOL]** Knob
- 12 Transmit / Receive LED
- 13 Accessory Jack & Cover
- 14 Speaker
- 15 LCD Display
- 16 **[SCAN]** / **[MEM]** (memory) key
- 17 **[▲]** Channel/Menu list UP key /
[OS/GS] Open Scan/Group Scan
select
- 18 **[▼]** Channel/Menu list DOWN
key / **[LOCK]** Keylock

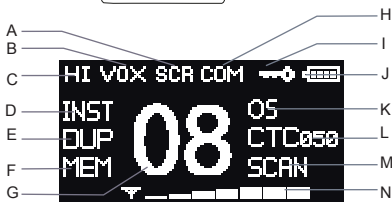


- A **SCR** Voice Scramble On
- B **VOX** Voice Activation On
- C **HI / LO** TX Power Level
- D **INST** Instant Channel
- E **DUP** Duplex On
- F **MEM** Channel is in Memory
- G Channel
- H **COM** Audio Componder On
- I Keylock
- J Battery Level Indicator
- K **OS / GS** Open Scan / Group Scan
- L **CTCSS / DCS** and code number
- M **SCAN** Scanning
- N Transmit/Receive Indicator

Getting Started

Attaching the Antenna

The UH755 comes with a precision tuned 477MHz antenna for UHF-CB use.

Attach the antenna to the UH755.
Be sure the antenna is firmly seated.

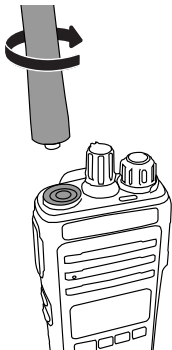

Attaching the Beltclip


The belt clip may be pre-installed for convenience.

To attach the belt clip:

1. Align the belt clip over the 2 screw holes on the back of the UH755 body.
2. Use a suitable Philips screwdriver to fasten the 2 belt clip screws to the UH755 body.

To remove the belt clip:


1. Use a suitable Phillips screwdriver to loosen the 2 belt clip screws to release the belt clip from the UH755 body.

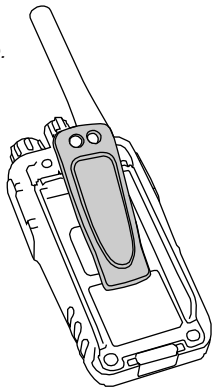


Getting Started

Attaching the Battery Pack

1. If the belt clip is attached to the radio, press the top of the beltclip to lever the bottom of the beltclip up while sliding the battery pack onto the back of the radio. It will only fit in one way.

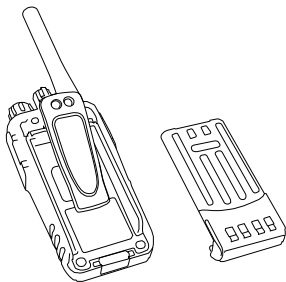

2. Push battery all the way up until it the battery latch at the bottom locks into place. Be sure the battery pack fits tightly against the UH755 body.

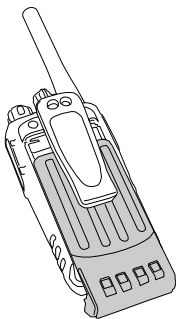

CAUTION

Avoid exposing the Lithium Ion battery, attached or unattached to the radio, in direct sunshine, heated cars, or in areas with temperatures below -20°C (-4°F) or above $+60^{\circ}\text{C}$ ($+140^{\circ}\text{F}$).

Exposing the chemicals contained within the battery pack to temperatures above $+60^{\circ}\text{C}$ ($+140^{\circ}\text{F}$) may cause the battery to rupture, fail or reduce performance.

In case of exposure to cell contents, wash the affected area thoroughly, and seek medical attention.

Additional battery cautions should be applied as described on page 2.

Getting Started

Connect the Drop-in Charger with AC Adaptor

Plug one end of the AC adapter into a wall outlet and the other end into the drop-in charger.

If you use the drop-in charger in a mobile vehicle with 12V DC power, use the optional cig-lead adaptor.

When the charger is powered, the LED illuminates green.

Charging the Battery Pack

Your radio is powered by a specially designed Lithium Ion battery pack.

- Before operating the UH755, charge the Lithium Ion battery pack for 5 hours without interruption in the drop-in charger.



NOTE

For the initial battery charge, make sure the radio is off for optimum charging.

1. Place the UH755 in the drop-in charger.
 2. If the radio battery is charging, the LED illuminates red and stays on, until fully charged, then it illuminates green.
- The charger won't overcharge the battery pack. When charging is completed, the charge LED changes colour from red to green.
 - You can monitor incoming calls while the UH755 is in the drop-in charger.



- **Do not transmit when the UH755 is in the drop-in charger!**

Getting Started

Battery Level Display

- LEVEL 5 Battery 100% full
- LEVEL 4 Battery approx. 75% capacity
- LEVEL 3 Battery approx. 50% capacity
- LEVEL 2 Battery approx. 25% capacity
- LEVEL 1 Battery low



NOTE

Recharge the battery at any time. From empty, the battery will take up to 5 hours to fully charge.

Battery Life : 35 Hours (Typical)

This is based on the following Duty Cycle:

Transmit (Low Power)	5%
Receive	5%
Stand-by	90%

Automatic Battery Save

The Automatic Battery Save feature extends the battery life by switching to power save mode if it remains out of operation for 10 seconds. This feature automatically activates during standby mode (RX mode without a signal).

Accessory Jack (SPKR/MIC) Cover

Make sure the SPKR/MIC jack cover is firmly pushed in to maintain splashproof rating.

Connecting the Optional SPKR/MIC

Release the SPKR/MIC jack cover to plug in the SPKR/MIC.

Operation

- See the Controls and Indicators on page 6 of this operating guide for control knob and key operations.
- In addition to the key and control knob functions, many features are available in the Menu.

MENU


00	Squelch	06	Scramble
01	CTCSS / DCS	07	Compander
02	BCL	08	Roger Beep
03	Duplex (Rep.)	09	Key Beep
04	VOX	10	Backlight Timer
05	Call Tone		

- For MENU function operation, see page 20.

Power On/Off

To turn the unit **ON**, rotate the **[ON/OFF VOL]** clockwise. A channel number and battery level should appear on the display.

To turn the unit **OFF**, rotate the **[ON/OFF VOL]** knob counter-clockwise. The display will disappear.

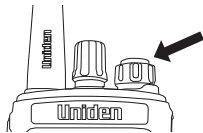


Volume

Rotate the **[ON/OFF VOL]** knob clockwise or counter-clockwise to adjust speaker volume to a desired listening level.


Getting Started

Selecting a Channel

Rotate the **[CHANNEL]** knob or press **[▲]** or **[▼]** to select the desired channel.

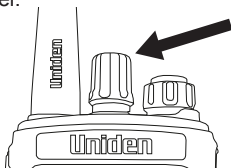

Or



NOTE


For your reference a list of the available channels, corresponding frequencies and guidelines for their use and selection is printed on page 27. For Australia, Channels 05 and 35 are reserved for Emergency Calls.

Instant Channel Function (Priority Channel)

The Instant Channel Function is a one-touch channel key.

To use the Instant Channel Key:

1. Press **[INST]** to go to the stored Instant channel.
 - The default channel is the emergency CH 05.
 - The Instant channel is always indicated by the **INST** icon.
2. Press **[INST]** again to return to the previous channel.

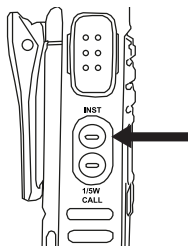

To store a new channel as the Instant Channel:

1. Select a preferred channel.
2. Press and hold **[INST]** for 2 seconds to store the new setting.

The **INST** icon appears besides the channel number.

 - In Group Scan mode, the Instant channel is the Priority channel.

Operation


To Transmit and Receive

The UH755 uses the UHF-CB Channels. For your reference a list of the available channels and corresponding frequencies is printed on page 28 - page 29.

The maximum RF transmit power of the UH755 is 5 Watts.

To switch between 5 Watts (Hi) and 1 Watt (Lo) power:

1. Press **[1/5W]**.
LO or **HI** appears on the LCD display.



To Transmit and Receive:

1. Before you transmit, listen for activity on the selected channel.
2. When the channel is clear, press and hold the **[PTT]** to transmit. The transmit/receive LED lights up red, and the LCD transmit/receive indicator appears.

Hold the radio with microphone approximately five cms in front of your mouth with the antenna at approximately 45° angle away from your head. Speak in a clear, normal conversational voice.

3. When you have finished speaking, release the **[PTT]** and listen for a response. The transmit/received LED turns off and the transmit/receive indicator then disappears from the LCD.

The transmit/receive LED lights up blue, and the LCD indicator appears when a transmission is being received by your radio.

Operation

Squelch

The squelch is used to eliminate the annoying background noise when there is no signal present on a channel. The squelch circuit does this by controlling when the radio's speaker turns on, based on the strength of received signals.



NOTE

Make sure to first select a channel not in use before setting the squelch in your UH755 UHF-CB radio.

The Auto Squelch feature has 0-9 preset squelch levels:


0 - max sensitivity (min squelch): Weak (distant) signals can open the squelch.

5 - med sensitivity (med squelch): Medium and strong signals can open the squelch.

9 - min sensitivity (max/tight squelch): Strong/nearby signals can open the squelch. It requires no adjustment.

To set the Squelch level:

1. Press **[MENU]** two times to enter the squelch setting list.
2. Rotate the **[CHANNEL]** knob or press **[▲]** or **[▼]** to select the desired squelch level.
3. Press & hold **[MENU]** to save the setting.
4. Press & hold **[MENU]** again, or press **[PTT]**, to exit menu mode.

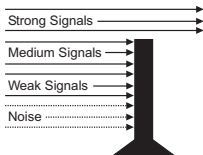

NOTE

If an incoming signal is very weak there is a possibility that you will have a choppy or broken reception, due to the sensitivity of the squelch. In this case, adjust the squelch level accordingly.

Operation

Call Function

The Call function transmits a short “wake up” tone to notify other users of impending communication. You may select from 10 types of tones (see *Call Tone (Selecting a Call Tone)* on page 22).

To use the Call function:

1. Before you use Call, make sure the channel is not in use.
2. Press and hold **[CALL]** and the Call Tone will be transmitted.



NOTE

Current regulations require calling tones to be restricted to one transmission per minute. If a second transmission is attempted within one minute then an error tone will sound.

Using a Repeater Channel


UHF-CB Repeaters are used to retransmit or relay your signal. Repeaters will extend the range of your radio and overcome the shielding effect caused by solid obstructions.

In normal Simplex operation, your radio transmits on one particular frequency and receives on that same frequency. If there is a barrier (i.e. a Tall Building) that partially blocks your transmitted signal, the possibility of the other radio receiving the signal is very slim. Valleys, metallic structures, etc., tend to act as a screen between radios.

Standard Operation without the aid of a Repeater Station



Operation with the aid of a Repeater

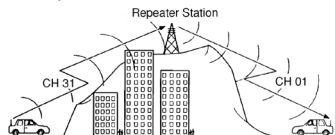

Operation

With Duplex operation, the signal coming from your radio is received by the Repeater station and then re-transmitted at the same time on another channel.

For example:

1. CH01 is on Duplex Mode - will receive on CH01 but Transmit on CH31
2. CH41 is on Duplex Mode - will receive on CH41 but Transmit on CH71, etc... Refer to UHF-CB Channel & Frequencies table on p.28 - p.29.

If you transmit on CH01 Duplex mode, you are actually transmitting on CH31, and the repeater station down-converts your signal and retransmits on CH01.

To Operate in Duplex Mode (using a Repeater)

Only channels 01 - 08 and 41 - 48 are available for Duplex.

1. Press **[MENU]**.
2. Scroll down the list to **Duplex (rep.)** and press **[MENU]**.
3. Select ON or OFF.
4. Save the setting by pressing and holding **[MENU]**.
5. Press & hold **[MENU]** again, or press **[PTT]**, to exit menu mode.

DUP icon appears beside the channel when Duplex setting is enabled for a duplex capable channel.



Search online for available UHF-CB repeaters in your area.

Operation

Scanning

The scan feature allows you to search for active channels automatically. You can only scan channels that are stored in the Scan memory.

The UH755 has two Scan modes (two groups of Scan memory);

- Open Scan (OS) mode,
- Group Scan (GS) mode.

Indicated by the **OS** or **GS** icon on the LCD. A channel is stored in the scan memory of the current scan mode when the **MEM** icon appears beside the channel number.



NOTE

By default the UH755 is set to OS scan mode with all UHF-CB channels stored into the OS channel memory. The GS scan memory by default is empty - awaiting user customisation.

You can change or customize the channels stored in OS or GS scan memory by following the steps on *Add/Remove Channels from SCAN Memory* on page 18.

What is Open Scan (OS) Mode?

OS scans all memory (MEM) channels in the OS scan memory. If an active channel is found, scanning will pause on that channel while there is a signal.

What is Group Scan (GS) Mode?

Allows you to monitor the Instant Channel (as a Priority Channel) while scanning the GS memory (MEM) channels.

See *Instant Channel Function (Priority Channel)*, page 12 for how to set the Priority channel.



NOTE

If GS Scanning is initiated when there are no channels programmed in GS scan memory, an error tone will be heard and scanning will not start.

Operation

Add/Remove Channels from SCAN memory

1. Select which Scanning Mode you wish to use.

Press and hold the **[OS/GS]** key to change OS or GS Mode.
OS or **GS** icon appears on the display.

2. Rotate the **[CHANNEL]** knob or press **[▲]** or **[▼]** to select the channel you want to store.
3. Press and hold **[MEM]** for 1.5 secs. to store.
MEM icon appears and a short tone beep is heard.
4. To remove the channels from Memory:
Press and hold **[MEM]** for 1.5 seconds once more.
Two short tone beeps are heard and the **MEM** icon disappears.

To Start Channel SCAN

1. Press **[SCAN]** and the radio will begin scanning the channels that are in the OS or GS memory - depending on which of these is currently active. **SCAN** icon flashes during scanning.

Scan Direction

SCAN will begin scanning for active channels in a sequential order. You can change the scan direction (increasing or decreasing channel number) by rotating the **[CHANNEL]** knob or pressing **[▲]** or **[▼]**.

Drop-out delay

When SCAN finds a busy channel it pauses scan to receive the signal. When the received signal stops, the radio waits for 3 seconds for the return of the signal, otherwise, the radio resumes scanning.

Operation

Recent Active Channels

SCAN remembers recent active channels and monitors these channels for activity while scanning through the scan memory. This means if recently active channels become active again during SCAN, the radio will pause on these channels first. This makes scanning for active channels more efficient (faster) the longer SCAN is operating.

Skipping an Active Channel

When paused on an active channel it is not possible to skip this channel as the recent active channel feature will cause scan to lock back onto that active channel. Wait for the active channel to become inactive and SCAN will resume. If you want to avoid an active channel completely, deactivate SCAN and remove the channel from the scan memory, then reactivate SCAN.

Priority Channel in GS Mode

In GS mode if SCAN is paused on an active channel that is not the Priority Channel, and the Priority Channel becomes active, the radio will switch to the Priority Channel for as long as there is a signal.

2. To deactivate SCAN, press **[SCAN]** or **[MENU]**.



NOTE

If SCAN is deactivated while it is tuned to an active channel, the UH755 will stay on that active channel.

If SCAN is deactivated while in-between active channels, the UH755 will reinstate the last active channel.

If SCAN is deactivated when no active channel has been found, the UH755 will reinstate the starting channel.

Operation | Menu Functions

Menu Functions

00	Squelch	06	Scramble
01	CTCSS / DCS	07	Compander
02	BCL	08	Roger Beep
03	Duplex (Rep.)	09	Key Beep
04	VOX	10	Backlight Timer
05	Call Tone		

To use the MENU:

1. Press **[MENU]** to enter the menu or setting.
2. Rotate the **[CHANNEL]** knob or press **[▲]** or **[▼]** to select the Menu item you want to view, and then press **[MENU]**.
3. Save setting changes by pressing and holding **[MENU]**.
4. Press & hold **[MENU]** again, or press **[PTT]**, to exit menu mode.

The radio will exit the menu after 3 seconds if no key is pressed.

Squelch

See *Squelch* on page 12.

CTCSS / DCS

CTCSS (Continuous Tone Coded Squelch System)

The CTCSS squelch codes allows a group to talk to each other without hearing other users on the same channel. The group needs to use the same code. And as there are 50 CTCSS codes available the chances of nearby users using the same code is unlikely.

DCS (Digital Coded Squelch)

DCS is a digital version of CTCSS. It provides 104 extra, digitally coded squelch codes that follow after the 50 CTCSS codes. Follow the steps for changing CTCSS code but select a DCS code as desired.

Operation | Menu Functions

To use CTCSS or DCS:

1. Press **[MENU]**.
2. Scroll down the list to **CTCSS / DCS** and press **[MENU]**.
3. Select a CTCSS or DCS code.
 - There are 50 CTCSS codes available.
 - There are 104 DCS codes available
 - To turn off CTCSS / DCS, select OFF.
4. Save the setting by pressing and holding **[MENU]**.
5. Press & hold **[MENU]** again, or press **[PTT]**, to exit menu mode.

CTC or **DCS** icon, and the code number appears when a code is selected for a channel.



Channels 5 and 35 are used for emergency channels. CTCSS/DCS will not operate on these channels.

BCL (Busy Channel Lock-out)

This feature prevents accidental transmission on a busy channel. This is recommended on channels where CTCSS or DCS is being used. If you hear sound from the speaker, the BCL feature will prevent you from transmitting.

To activate BCL:

1. Press **[MENU]**.
2. Scroll down the list to **BCL** and press **[MENU]**.
3. Select ON or OFF.
4. Save the setting by pressing and holding **[MENU]**.
5. Press & hold **[MENU]** again, or press **[PTT]**, to exit menu mode.

Duplex (Rep.)

See *To Operate in Duplex Mode (using a Repeater)* on page 14.

Operation | Menu Functions

VOX (Built-in Voice Activated Circuit)

VOX is Voice activated transmission, no pressing of the PTT key. For optimum performance, use VOX when the accessory earpiece is connected. When VOX is turned on (levels 1-10) the earpiece microphone is most sensitive at level 1, and least sensitive at level 10.

To use VOX:

1. Press **[MENU]**.
2. Scroll down the list to **VOX** and press **[MENU]**.
3. Scroll to a desired VOX level.
4. Save the setting by pressing and holding **[MENU]**.
5. Press & hold **[MENU]** again, or press **[PTT]**, to exit menu mode.

VOX icon appears at the top of the LCD when a VOX setting is enabled.

Call Tone (Selecting a Call Tone)

Select from 10 calling tones to use with the Call Tone function.

To change the Call Tone pattern:

1. Press **[MENU]**.
2. Scroll down the list to **CALL** and press **[MENU]**.
3. Scroll to a desired Call Tone pattern.
As you change selections the tone pattern will sound.
4. Save the setting by pressing and holding **[MENU]**.
5. Press & hold **[MENU]** again, or press **[PTT]**, to exit menu mode.

Scramble (Voice Scramble)

The scramble feature is a voice inversion function that provides additional privacy with your communication. The inversion frequency is 3400Hz.

Operation | Menu Functions

1. Press **[MENU]**.
2. Scroll down the list to **Scramble** and press **[MENU]**.
3. Scroll to select ON or OFF.
4. Save the setting by pressing and holding **[MENU]**.
5. Press & hold **[MENU]** again, or press **[PTT]**, to exit menu mode.

SCR icon appears at the top of the LCD when Scramble is enabled.



NOTE

Scramble cannot be enabled on channels 05 & 35 (emergency channels) and channel 11 (road channel).

Compander

The audio compander compands transmitted audio and expands received audio. When used between radios using the same function it can reduce background noise in some situations.

1. Press **[MENU]**.
2. Scroll down the list to **Compander** and press **[MENU]**.
3. Scroll to select ON or OFF.
4. Save the setting by pressing and holding **[MENU]**.
5. Press & hold **[MENU]** again, or press **[PTT]**, to exit menu mode.

COM icon appears at the top of the LCD when Compander is enabled.

Roger Beep

Roger Beep automatically adds a sign-off tone to the end of transmissions.

1. Press **[MENU]**.
2. Scroll down the list to **Roger Beep** and press **[MENU]**.
3. Scroll to select ON or OFF.
4. Save the setting by pressing and holding **[MENU]**.
5. Press & hold **[MENU]** again, or press **[PTT]**, to exit menu mode.

Operation | Menu Functions

Key Beep

Key Beep is the tone sounded after a key press.

1. Press **[MENU]**.
2. Scroll down the list to **Key Beep** and press **[MENU]**.
3. Scroll to select ON or OFF.
4. Save the setting by pressing and holding **[MENU]**.
5. Press & hold **[MENU]** again, or press **[PTT]**, to exit menu mode.

Backlight (Timer)

The display backlight is set by default to remain on for 10 seconds whenever there is a key press, or incoming signal.

To change the Backlight Timer time:

1. Press **[MENU]**.
2. Scroll down the list to **Key Beep** and press **[MENU]**.
3. Scroll to select ON or OFF.
4. Save the setting by pressing and holding **[MENU]**.
5. Press & hold **[MENU]** again, or press **[PTT]**, to exit menu mode.




Changing the Backlight timer will affect the battery operating time (see *Battery Level Display*, page 10). For optimum battery operating time, avoid turning the backlight timer to ON (always on), and instead select a moderate duration.

Key Lock

To prevent accidental entries, you can lock the keypad. Only **[PTT]** and **[ON/OFF VOL]** are accessible when Key Lock is activated.

Press and hold **[LOCK]** until it beeps to activate or deactivate Key Lock.

 icon appears at the top of the display when activated.

CTCSS Codes and Frequencies

Code No.	Frequency (Hz)	Code No.	Frequency (Hz)
'oF'	OFF	26	162.2
1	67.0	27	167.9
2	71.9	28	173.8
3	74.4	29	179.9
4	77.0	30	186.2
5	79.7	31	192.8
6	82.5	32	203.5
7	85.4	33	210.7
8	88.5	34	218.1
9	91.5	35	225.7
10	94.8	36	233.6
11	97.4	37	241.8
12	100.0	38	250.3
13	103.5	39	69.4
14	107.2	40	159.8
15	110.9	41	165.5
16	114.8	42	171.3
17	118.8	43	177.3
18	123.0	44	183.5
19	127.3	45	189.9
20	131.8	46	196.6
21	136.5	47	199.5
22	141.3	48	206.5
23	146.2	49	229.1
24	151.4	50	254.1
25	156.7		

DCS Codes and Frequencies

Code No.	DCS Code (Octal)	Code No.	DCS Code (Octal)	Code No.	DCS Code (Octal)
1	023	36	223	71	445
2	025	37	225	72	446
3	026	38	226	73	452
4	031	39	243	74	454
5	032	40	244	75	455
6	036	41	245	76	462
7	043	42	246	77	464
8	047	43	251	78	465
9	051	44	252	79	466
10	053	45	255	80	503
11	054	46	261	81	506
12	065	47	263	82	516
13	071	48	265	83	523
14	072	49	266	84	526
15	073	50	271	85	532
16	074	51	274	86	546
17	114	52	306	87	565
18	115	53	311	88	606
19	116	54	315	89	612
20	122	55	325	90	624
21	125	56	331	91	627
22	131	57	332	92	631
23	132	58	343	93	632
24	134	59	346	94	654
25	143	60	351	95	662
26	145	61	356	96	664
27	152	62	364	97	703
28	155	63	365	98	712
29	156	64	371	99	723
30	162	65	411	100	731
31	165	66	412	101	732
32	172	67	413	102	734
33	174	68	423	103	743
34	205	69	431	104	754
35	212	70	432		

UHF-CB Channel Guidelines

Always listen on a channel (or observe the receive signal level meter) to ensure it is not already being used before transmitting.

Channels 5 and 35 are used for emergency channels. CTCSS will not operate on these channels.

Please follow these guidelines for channel use in Australia:

- Channels 05 and 35 are Emergency Channels.
- Channel 11 is a Calling Channel.
- Channels 22 and 23 are for telemetry and telecommand applications and TX is inhibited on these channels.

General communication is accepted on all other channels with these guidelines:

- Channel 40 - road channel (Australia).
- Channels 01-08 (and 31-38), and Channels 41-48 (and 71-78) are repeater channels.



NOTE

Important information - 80 Channel UHF-CB channel expansion

To provide all users additional channel capacity within the UHF-CB Band. The ACMA will change the majority of the current wideband 40 channel use to narrowband channel use. This allows for additional channels to be added, up to 80 Channels.

This simply means that the new narrowband radio you have purchased will have more channels than older radios. Please refer to the guidelines above and the channel chart for further channel information.

A list of currently authorised channels can also be obtained from the ACMA website in Australia and the MED website in New Zealand.

Interference / Poor Audio

When a new narrowband radio receives a signal from an older wideband radio the speech may sound loud.

Narrowband radios operating on CH41 - CH80 may encounter interference from a nearby wideband radios transmitting on high power on an adjacent channel (frequency).

When an older wideband radio receives a signal from a new narrowband radio the speech may sound quiet - the wideband radio user simply adjusts their radio volume for best performance.

The above situations are not a fault of the radio but a symptom of mixed wideband and narrowband radios in current use. It is expected that as older wideband radios are phased out this issue will be eliminated.



NOTE

UHF-CB Channels and Frequencies

CH No.	Simplex Mode Transmit / Receive Frequency (MHz)	Duplex Mode Transmit Frequency (MHz)	CH No.	Simplex Mode Transmit / Receive Frequency (MHz)
1	476.425	477.175 (CH31)	21	476.925
2	476.450	477.200 (CH32)	22	476.950 (RX only)
3	476.475	477.225 (CH33)	23	476.975 (RX only)
4	476.500	477.250 (CH34)	24	477.000
5	476.525	477.275 (CH35)	25	477.025
6	476.550	477.300 (CH36)	26	477.050
7	476.575	477.325 (CH37)	27	477.075
8	476.600	477.350 (CH38)	28	477.100
9	476.625		29	477.125
10	476.650		30	477.150
11	476.675		31	477.175
12	476.700		32	477.200
13	476.725		33	477.225
14	476.750		34	477.250
15	476.775		35	477.275
16	476.800		36	477.300
17	476.825		37	477.325
18	476.850		38	477.350
19	476.875		39	477.375
20	476.900		40	477.400

UHF-CB Channels and Frequencies

CH No.	Simplex Mode Transmit / Receive Frequency (MHz)	Duplex Mode Transmit Frequency (MHz)	CH No.	Simplex Mode Transmit / Receive Frequency (MHz)
41	476.4375	477.1875 (CH 71)	61	476.9375 (RX only)
42	476.4625	477.2125 (CH 72)	62	476.9625 (RX only)
43	476.4875	477.2375 (CH 73)	63	476.9875 (RX only)
44	476.5125	477.2625 (CH 74)	64	477.0125
45	476.5375	477.2875 (CH 75)	65	477.0375
46	476.5625	477.3125 (CH 76)	66	477.0625
47	476.5875	477.3375 (CH 77)	67	477.0875
48	476.6125	477.3625 (CH 78)	68	477.1125
49	476.6375		69	477.1375
50	476.6625		70	477.1625
51	476.6875		71	477.1875
52	476.7125		72	477.2125
53	476.7375		73	477.2375
54	476.7625		74	477.2625
55	476.7875		75	477.2875
56	476.8125		76	477.3125
57	476.8375		77	477.3375
58	476.8625		78	477.3625
59	476.8875		79	477.3875
60	476.9125		80	477.4125

Warranty

UNIDEN UH755, UH755-2DLX Series UHF CB Transceiver

IMPORTANT: Satisfactory evidence of the original purchase is required for warranty service

Please refer to our Uniden website for any details or warranty durations offered in addition to those contained below.

Warrantor: The warrantor is Uniden Australia Pty Limited ABN 58 001 865 498 (“Uniden Aust”).

Terms of Warranty: Uniden Aust warrants to the original retail purchaser only that the UH755 Series, or UH755-2DLX Series (“the Product”), will be free from defects in materials and craftsmanship for the duration of the warranty period, subject to the limitations and exclusions set out below.

Warranty period: This warranty to the original retail purchaser is only valid in the original country of purchase for a Product first purchased either in Australia or New Zealand.

Product	3 Years
Battery Pack & Accessories	1 Year

If a warranty claim is made, this warranty will not apply if the Product is found by Uniden to be:

- (A) Damaged or not maintained in a reasonable manner or as recommended in the relevant Uniden Owner’s Manual;
- (B) Modified, altered or used as part of any conversion kits, subassemblies or any configurations not sold by Uniden Aust;
- (C) Improperly installed contrary to instructions contained in the relevant Owner’s Manual
- (D) Repaired by someone other than an authorized Uniden Repair Agent in relation to a defect or malfunction covered by this warranty; or
- (E) Used in conjunction with any equipment, parts or a system not manufactured by Uniden.

Parts Covered: This warranty covers the Product and included accessories.

Warranty

User-generated Data: This warranty does not cover any claimed loss of or damage to user-generated data (including but without limitation phone numbers, addresses and images) that may be stored on your Product.

Statement of Remedy: If the Product is found not to conform to this warranty as stated above, the Warrantor, at its discretion, will either repair the defect or replace the Product without any charge for parts or service. This warranty does not include any reimbursement or payment of any consequential damages claimed to arise from a Product's failure to comply with the warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is in addition to and sits alongside your rights under either the COMPETITION AND CONSUMER ACT 2010 (Australia) or the CONSUMER GUARANTEES ACT (New Zealand) as the case may be, none of which can be excluded.

Procedure for obtaining warranty service: Depending on the country in which the Product was first purchased, if you believe that your Product does not conform with this warranty, you should deliver the Product, together with satisfactory evidence of your original purchase (such as a legible copy of the sales docket) to Uniden. Please refer to the Uniden website for address details. You should contact Uniden regarding any compensation that may be payable for your expenses incurred in making a warranty claim. Prior to delivery, we recommend that you make a backup copy of any phone numbers, images or other data stored on your Product, in case it is lost or damaged during warranty service.

UNIDEN AUSTRALIA PTY LTD

Phone: 1300 366 895

Email: custservice@uniden.com.au

THANK YOU FOR BUYING A UNIDEN PRODUCT.

Uniden[®]

© 2020 Uniden Australia Pty Limited. Printed in PRC.